



**IKO**  
Setting the Standard


**UltraHP™**

## HIGH PROFILE RIDGE CAP SHINGLES


# INSTALLATION INSTRUCTIONS

**IKO UltraHP™** adjustable design eliminates the need of hand-bending, flexing, opening or closing of the unit. Simply remove unit from carton and place on ridge as is. Then follow instruction as shown below.


- 1** Apply the shingles with an 8-1/4" exposure (even with notch), beginning at the bottom of the hip, or from the end of the ridge opposite the direction of the prevailing winds.

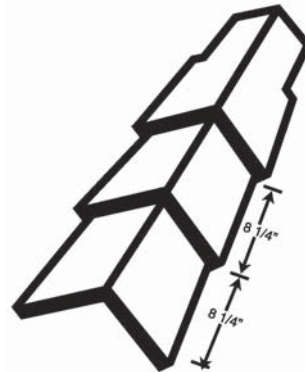


- 2** Form the **IKO UltraHP™** to the roof deck prior to nailing. For lower slopes, it may be necessary to push down slightly on the center of the shingle.

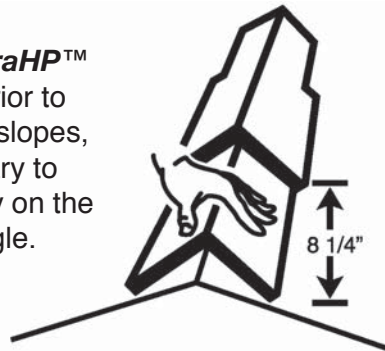

For steeper roofs, it may be necessary to push down slightly on the sides of the shingle.

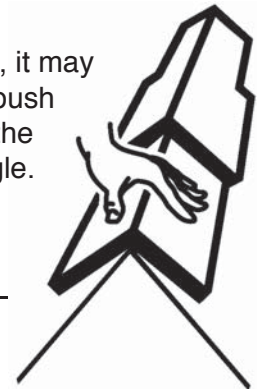

- 3** Use two nails, one on each side of the shingle, located 3/4" back from the shingle notch. In high wind areas, seal down each **IKO UltraHP™** shingle with two 1" spots of asphalt plastic cement.

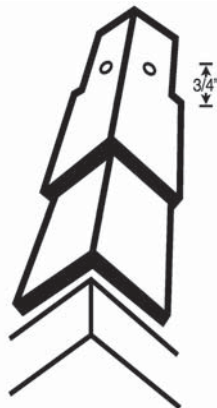

- 4** For added roof definition, **IKO UltraHP™** may also be installed at gable and rake edges.

